

 **LENCORE**  
COMFORT. PRIVACY. PRODUCTIVITY.



# INSTALLATION **MANUAL**

Ceiling Plate Speaker  
(Model LG035-G545 / G585)

## INSTALLATION INSTRUCTIONS

1. Cut a 7-inch round hole in sheet rock, ceiling tile, or other area(s) you want to install the unit.
2. Remove grill of ceiling plate speaker using the hook tool (included with each Ceiling Plate speaker order) to access (3) clamp screws. Adjust screws to desired opening in order to put ceiling plate in place.
3. Insert speaker into 7-inch opening.
4. Screw down clamp screws to hold unit in place in sheet rock, ceiling tile or other.
5. Attach the speaker patch cable to “In” on can. Attach a second patch cable to “Out” if there is another speaker after this one. The “In” and “Out” are marked with a label on the bottom of the can, assuming the ceiling plate is the top of the can.
6. Once the patch cable(s) and speaker are in place, reattach grill by slipping it into place using moderate **pressure**.

### **Notes:**

- Securing the speaker to the deck or using a tile bridge is dependant on local codes and is the responsibility of the installer to determine any additional fastening that needs to take place.
- Chicago Box Ceiling Plate speakers require a tile bridge to support the additional weight of the box on the speaker. See Tile Bridge data sheet and installation instructions.

For additional Technical Support call: 516-682-9292

Lencore Acoustics LLC  
1 Crossways Park Drive West  
Woodbury, NY 11797  
516-682-9292  
[info@lencore.com](mailto:info@lencore.com)  
[www.lencore.com](http://www.lencore.com)