



### SEQUENCING OP'S IN THE FIELD i.Net® PLENUM OP

#### Sequencing OP's in the Field

The i.Net In-Plenum Operating Platform (OP), if purchased through distribution, requires sequencing in the field in order to properly function. The following demonstrates the process to properly sequence OP's in the field.

#### If you have any questions, please contact Lencore Support at: 516-682-9292

#### The following equipment is required to sequence OP's:

- LDV Software (Available from Lencore)
- Sequencer Software (Available from Lencore)
- U10 Device (an Echelon device available for \$400.00 from Lencore or your local distributor)
- Personal Computer
- A Cat5e Cable, stripped to use the Orange and Orange/White wires through a Phoenix Connector to clip into the U10 Device; other end is a standard RJ45 connection (Available from Lencore)

#### Step 1:

Pre-load the PC with both the LDV and Sequencer software drivers (both available from Lencore Technical Support: support@lencore.com).

#### Step 2:

Connect your OP to a power supply.



#### Sequencing OP's in the Field

#### Step 3:


Connect the OP through the Data in port to with the RJ45 Connection to the U10 Device to the USB Port on the PC.



#### Step 4:

Open the LonWorks Interfaces from the PC Control Panel.

• On the pop-up window, on the left-hand side, you will see a "LON" driver to be used. Most likely it will show "LON1." Double-click to open this driver.

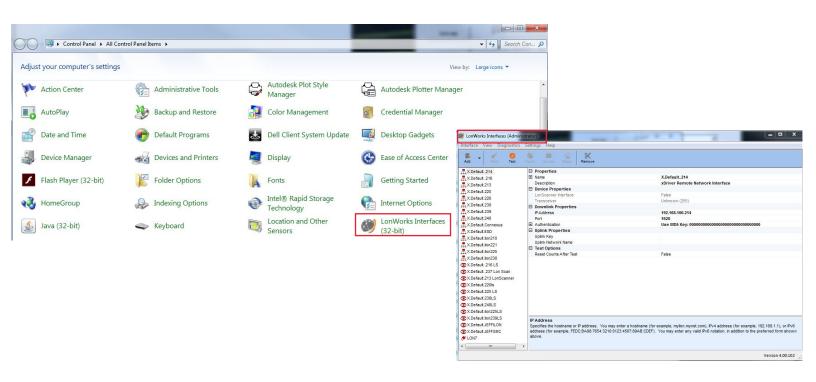

#### Sequencing OP's in the Field

#### Step 5:

This will open the Sequencer software


• From the Drop-down menu, choose the LON driver (most likely it sill show "LON1")

Activate	LON1
Set OP #	New OP Number 1
Stop	

#### Step 6:

A Set OP # Window will appear

Click "Activate"

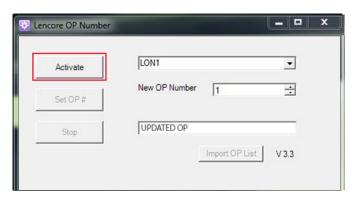

• A "Ready" indicator will appear

Activate	LON1	•
Set OP #	New OP Number 1	÷
Stop	Ready	

### APPLICATION NOTE Sequencing OP's in the Field

• Change the OP # to the desired OP Number

Activate	LON1	•
Set OP #	New OP Number 5	÷
Stop	Ready	

- Click "Set OP #"
- Wait until the Window reads "Updated OP"

Activate LO	NI	-
New C	P Number 5	÷
Stop	ed OP	

• The Window will then change back to "Ready"

Set OP # Ready	Activate	LON1	•
Stop	Set OP #	New OP Number 5	÷
	Stop	Ready	

#### Sequencing OP's in the Field

#### Step 7:

Power cycle the OP

• After power cycle is complete the OP should read as the new OP # set



Lencore Acoustics LLC. 516-682-9292 info@lencore.com www.lencore.com