

Silver

MODEL G623525

2RU Rack Mounted Sound Masking



USER GUIDE

Installation of Silver (G623525) is simple: mount the unit into the equipment rack and plug in the power supply. The sound masking will begin 20 seconds after power up. Once the system is running the sound masking levels and contour are easily adjusted using the included **handheld remote**.

Outputs

4-Speaker outputs (Channels)

8-Speaker maximum per output channel with RJ45 connectors

Each Channel, A, B, C & D are adjusted individually enabling each channel to be set independently of the others. All speakers on a channel share the same sound masking and contour personality.

Hand-held Remote

Included with the Silver System is a hand-held remote control that enables the end user to make volume and contour control adjustments to the sound masking. *Point the remote directly at the **REMOTE IR** window on the top of the OP to make your changes.*

Masking Volume

Press the "A" button. Next Use + and – on the **Masking buttons** to adjust the level for Channel A. Do same for each channel. Alternatively, use the **ALL Button** to adjust the volume for all 4 channels simultaneously. The ALL Button method would be applicable for example in a large open area where the space is uniform and can have the same sound masking personality.

Masking Contour

Press the "A" button. Next Use **W** and **P** on the **Contour buttons** to adjust the sound masking curve for Channel A that best suits your environment.

Pressing the "**W**" increases the level of White Noise. White noise interferes with speech frequencies and is required to attain speech privacy and must always be present. Pressing the "**P**" moves the balance towards the Pink Noise, a warmer tone. Do the same for each subsequent channel. Alternatively, just like the masking volume use the **ALL Button** to adjust the contour for all 4 channels simultaneously.



Aim the Remote at the IR Port Window



Hand-Held Remote for System Adjustments